



CAUTION: BEFORE MOUNTING PLOW, PERFORM THE ELECTRICAL TEST ON SHEET 2. A FAULTY SOLENOID WILL CAUSE WIRES TO OVERHEAT AND DAMAGE ELECTRICAL CONNECTIONS. IF YOU ARE UNSURE, PLEASE CONTACT A LICENCED PROFESSIONAL FOR INSTALLATION.

Notes:

1. Need Vehicle Hardware Kit (KT-001) for installation parts.
2. Install all wiring and terminals away from moving parts and heat producing items
3. White wire from Raise/Lower Switch to small terminal on Motor Solenoid.
4. Raise/Lower Switch mounts inside vehicle in position that is easily accessible while driving. Position the toggle switch so the locked position points toward vehicle floor. Toggle and Switch covers are provided in the kit.
5. Red Wire to Fuse Box (located under hood or under dash). Attach to fuse where power is only present when key is in the on position.
6. Mount Motor Solenoid to metal frame of vehicle. Ground wire is required if not mounted to metal.
7. Install Plug to rear bumper. Orient so plug flap swings upward. See sheet 2 for connector details.
8. Mount the 100 amp, resettable circuit breaker between the solenoid and plow connector.



TITLE:		
Wiring Instructions		
PROPRIETARY AND CONFIDENTIAL	SIZE	DWG. NO.
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF SUPERPLOW. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF SUPERPLOW IS PROHIBITED.	B	DC-004
		REV
		C
SCALE: 1:1	WEIGHT:	SHEET 1 OF 3

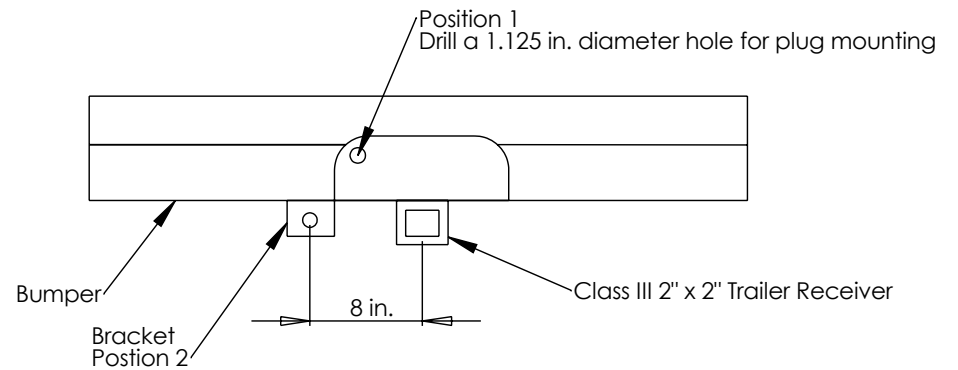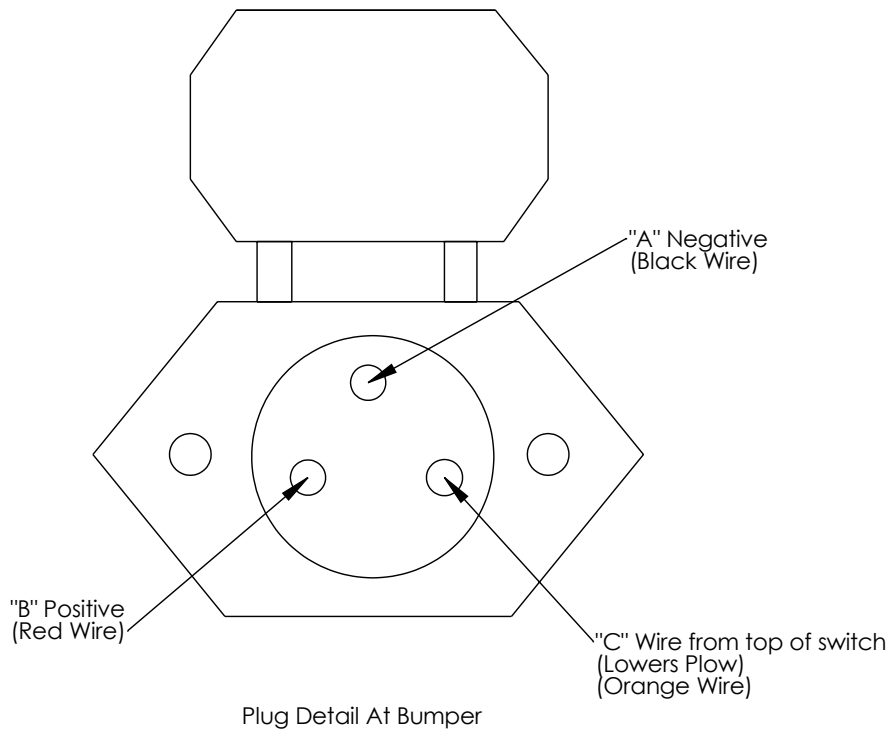

* = Recommended Plug locations.
 Plug may be located in or under bumper near hitch as shown above.
 Position 1 - Drill 1.125 in. diameter hole to mount on bumper
 Position 2 - Utilize bracket supplied in kit to mount under bumper.

Bumper Detail



CAUTION: BEFORE MOUNTING PLOW, PERFORM THE ELECTRICAL TEST ON SHEET 2. A FAULTY SOLENOID WILL CAUSE WIRES TO OVERHEAT AND DAMAGE ELECTRICAL CONNECTIONS. IF YOU ARE UNSURE, PLEASE CONTACT A LICENSED PROFESSIONAL FOR INSTALLATION.


Electrical Test

Recommend two people for the test. One in the vehicle cab to operate the switch and one at the connector to monitor the test light.

- 1) Using a test light and with the key in the on position, hold the switch up. You should have power across "A" & "B" terminals.
- 2) Release the switch and there should be no power across "A" & "B" terminals.
- 3) Using a test light and with the key in the on position, hold the switch down. You should have power across "A" & "C" terminals.
- 4) Return switch to neutral position and there should be no power across "A" & "C" terminals.



TITLE:		
Wiring Instructions		
PROPRIETARY AND CONFIDENTIAL	THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF SUPERPLOW. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF SUPERPLOW IS PROHIBITED.	
SIZE B	DWG. NO. DC-004	REV C
SCALE: 1:1	WEIGHT:	SHEET 2 OF 3

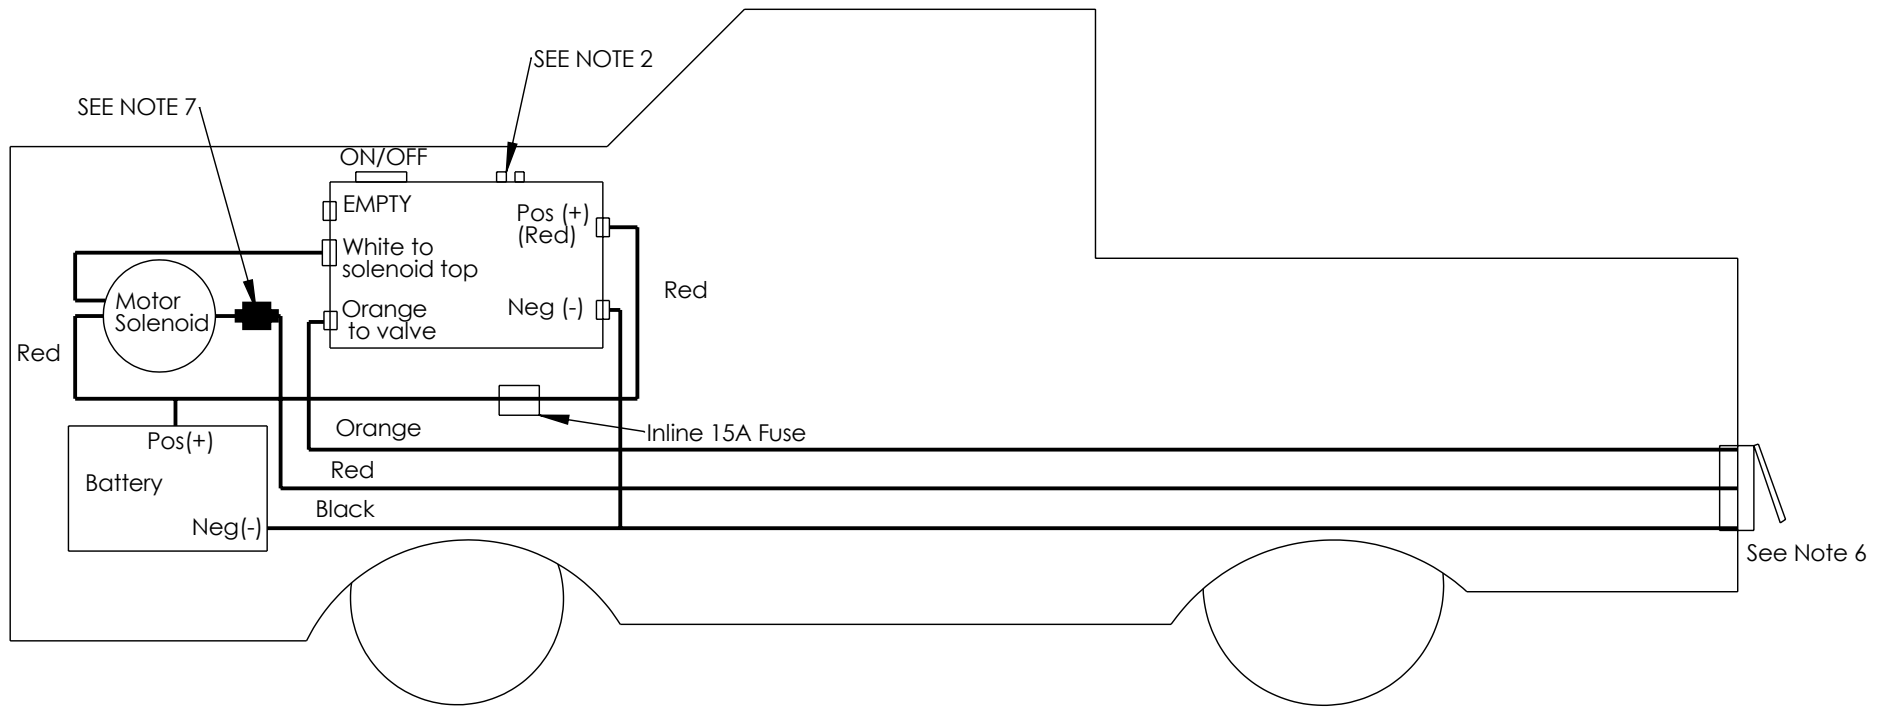

CAUTION: BEFORE MOUNTING PLOW, PERFORM THE ELECTRICAL TEST ON SHEET 2. A FAULTY SOLENOID WILL CAUSE WIRES TO OVERHEAT AND DAMAGE ELECTRICAL CONNECTIONS. IF YOU ARE UNSURE, PLEASE CONTACT A LICENCED PROFESSIONAL FOR INSTALLATION.

NOTES:

1. THESE WIRING INSTRUCTIONS ARE FOR INSTALLING THE WIRELESS CONTROLS.
2. REMOTEBUTTONS 1 & 2 SAME AS KEY FOB.
1= UP
2= DOWN
Notes:
3. Need Vehicle Hardware Kit (KT-002) for installation parts.
4. Install all wiring and terminals away from moving parts and heat producing items
5. Mount Motor Solenoid to metal frame of vehicle.
Ground wire is required if not mounted to metal.
6. Install Plug to rear bumper. Orient so plug flap swings upward.
See sheet 2 for connector details.
7. Mount the 100 amp, resettable circuit breaker between the solenoid and plow connector. Install in accordance with manufacturer's instructions.



PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF SUPERPLOW. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF SUPERPLOW IS PROHIBITED.

TITLE: WIRELESS WIRING INSTRUCTIONS		
SIZE B	DWG. NO. DC-004	REV C
SCALE: 1:1	WEIGHT:	SHEET 3 OF 3